
UNDERFLOOR HEATING (UFH) BOARDS

25MM INSULATED XPS FOAM BOARD

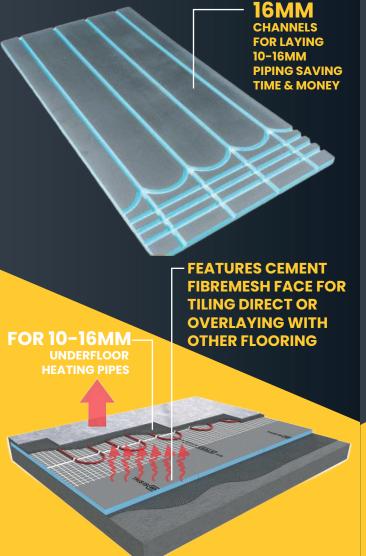

WATERPROOF MEMBRANE

MAKE YOUR BATHROOM / WET ROOM AREA

100% WATERPROOF

ON JOINTS & CORNERS
WITH WATERPROOF MEMBRANE*



*note - requires tanking paste - sold separately


WATERPROOF INTERNAL CORNERS

IDEAL FOR SHOWER TRAYS, BATHS & CORNERS



- 02920 098 016
- sales@tilebackerboard.co.uk
- tilebackerboard.co.uk
 - The Levels, Capital Business
 Park Cardiff CF3 2PU



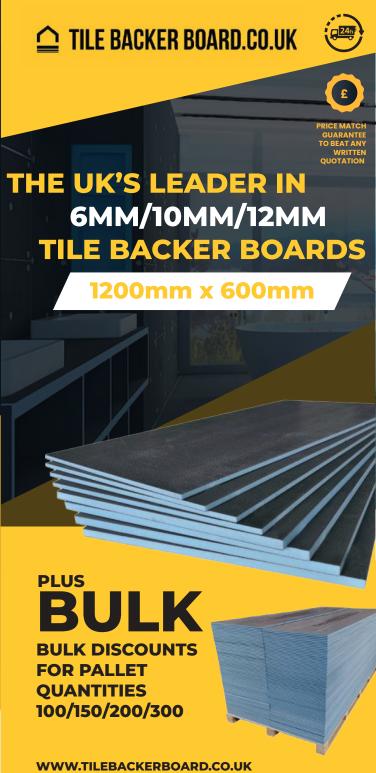

36MM STEEL WASHERS FOR FIXING TILE BACKER

BOARDS

PER BOARD



Cut to size using a sharp knife & straight edge. Take care of surface underside



Fixing to firm surface, either direct to timber stud frame or other using 36mm washers (sold separately) + suitable screw





2 Recommended 10/12mm for walls 6/10mm for Floors



4 Manufacturers recommend
15 fixings per board

TILE BACKER WASHER BULK PACKS

500

1,000

2,000


5,000

10,000



TILE BOARD SHOWER TRAYS 1200MM X 1000MM

UNIVERSAL FIT - SIMPLY CUT TO SIZE AND TILE DIRECTLY

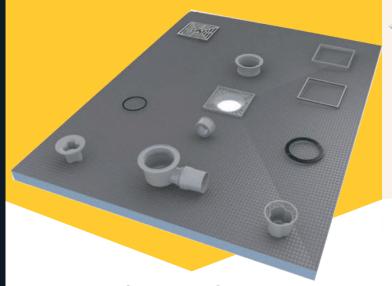


TILE BACKER BOARD SHOWER WALL NICHE PRE-CAST IN 1 PIECE



TILE DECOUPLING MATANTI-CRACKING MATTING

A MUST FOR SUBFLOORS SUBJECT TO MOVEMENT / CRACKING SUCH AS TIMBER FLOOR BOARDS or CONCRETE

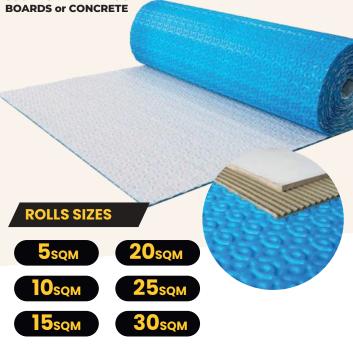

TIMBER SUBFLOOR

